


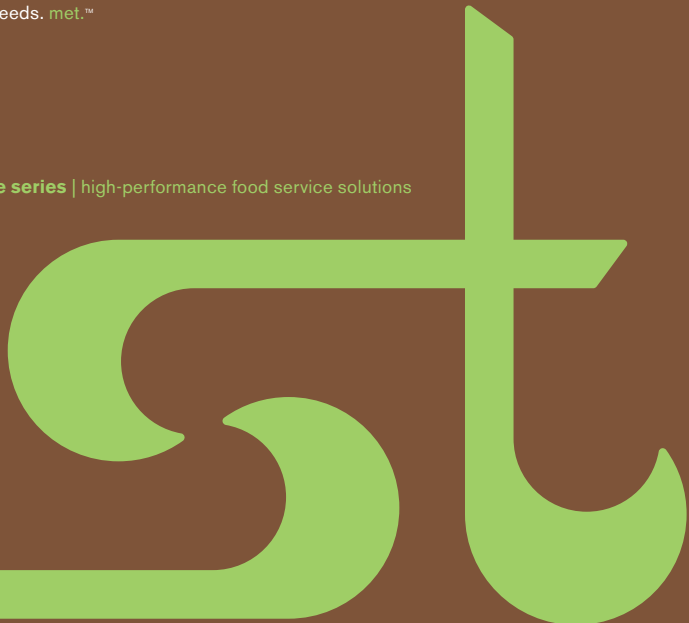

zero™

lime scale remover

resolve series | high-performance food service solutions



Zero removes lime film, iron stains and scale on many washable surfaces. Effective on stains that resist alkaline detergents and for soils with high calcium, magnesium or iron content. Excellent for use on dish machines, hospital or laboratory glassware, vitreous china and animal cages.

Directions for use

Descalc dish machines: Fill tank 2 to 3 inches below overflow level. Turn tank heaters on. Add 1 gallon Zero and allow machine to run until lime scale disappears. Apply full strength to deposits. Drain tank and refill with fresh water. Run machine for 5 minutes and drain. Descalc as necessary to prevent heavy buildups from occurring.

Descalc steam tables: Brush or spray resolve Zero full strength on interior surfaces. Let stand 10 minutes, then fill with water, turn on heat and bring to operational temperature and let stand for 10 minutes. Brush or scrape off remaining deposits. Drain and flush thoroughly with clean water. **Cleaning stainless steel or aluminum equipment:** Apply solution of 3 oz. of Zero per gallon of hot water until bright. Rinse thoroughly in clean water and drain dry. For large equipment apply with saturated cloth or sponge. Rinse thoroughly with cleanwater and drain dry.

Descaling coffee urns: Fill water jacket of urn with hot water and add 1 oz. of Zero per gallon of water. Heat and let stand for 15 minutes. Drain and rinse thoroughly with clean water. **Lab glassware:** The addition of Zero can be automatically and precisely controlled by use of dispensing equipment. To manually change the washer add 4 oz. of Zero to each 10 gallons of wash water in the pre-wash cycle.

DANGER

HAZARD STATEMENTS

Causes severe skin burns and eye damage. May be corrosive to metals.

PRECAUTIONARY STATEMENTS

Wear protective gloves, splash goggles, face shield, full suit, vapor respirator and boots. Do not breathe mist /vapors /spray. Wash thoroughly after handling.

FIRST AID

Eye Contact: Check for and remove any contact lenses. Flush with large quantities of water, holding eyelids open for 15 minutes. Seek medical attention immediately. Skin Contact: Wash skin with copious amount of water. Seek medical attention immediately. Inhalation: Remove to fresh air. Seek medical attention immediately. Ingestion: Do not induce vomiting. Drink copious amounts of water. Seek medical attention immediately.



STORAGE

Store in original container protected from sunlight, well ventilated area, away from incompatible materials, food and drink. Keep out of reach of children.

SPILL /LEAK

Avoid runoff into storm sewers and ditches which leads to waterways. Absorb spillage to prevent material damage.

DISPOSAL

Dispose of material in accordance with local, state and federal regulations.

HAZARDOUS INGREDIENTS

Urionium hydrogen sulphate (21351-39-3)

Toll-Free 888-726-8323

Offices 908-912-2500

Emergency 800-424-9300

www.cleaneeds.com



4 0 7 8